



BATTERY SERIES



PB61224

POWER BOOSTER (12V/24V)

- Switchable DC12V & DC24V
- Built-In 2pcs of DC12V 17A sealed rechargeable lead-Acid batteries.
- 10A fuse protection
- Output from clamp :Depend on 12V/24V switch position.
- output from socket :DC 12V Only.
- Capacity testing :turn the switch to DC12V.
- Charge method :turn the switch to DC12V. When charge with adaptor / cigarette plug.



WP127

POWER STATION

- Put the red clamp on positive level (+)
- Put the black clamp on negative level (-)
- Jump start car.
- After the car restart ,remove black & red clamps.

Charger

- Booster plug in car charger socket or house electric socket till indicator LED green light turned on the charge is completed.
- After using 2-3times or 2 month, please recharge this booster.
- The suggestion this battery has to charge every 2 months (it make sure the battery well and has a lasting battery life.)

Caution

- Red & black Clamps do not put together and have to away to each other.

Specification :

Voltage : 12volts

Max, Current : 500A

Weight : 3.3kgs

Material : Lead calcium batteries, plastics



WP128

POWER STATION

Rescue:

1. Place the red clip and clamp the battery positive (+).
2. Clamp the battery negative (-) with the black clip.
3. Start your car.
4. Start, you can remove the red, black clip.

Charging:

1. Charger plugged into the RCA charging hole to charge, charge to full green light is lit, that is to complete the charge .Charging time should not exceed 24 hours.
2. When the unit is not used for two months, please recharge.
3. Full charge at any time, can make the machine longer life (a long time without charging will cause WP128 battery damage).

Output operation:

1. WP128 front RCA output hole, you can use 50W of the output.
2. WP128 positive USB output hole, you can use 5V2A 3C products for charging use.
3. WP128 cigarette lighter behind the mother seat, can be connected to various types of vehicle equipment can output 10A.

Weight: 5 kg

Charging voltage: AC 100-240 volts

Battery Specifications: Sealed Battery - DC 12V 14 amps

Contents: host 1, 12V1.6A charger 1, car charger line 1



TRTS6223

23PCS TERMINAL RELEASE TOOL SET

- Special design to release terminals from the plastic connectors without damaging either.
- Release terminals on most body wiring connectors.
- Applicable : Suitable for most vehicles.

*Picture shown are for reference only



IBA300 **INNOVATED BATTERY ANALYZER**

- Works on 12volt CF/CMF, VRLA/GEL, AGM, CAL/CAL and SOIRAL Spiral and batteries.
- Conducts 4 tests on batteries and vehicle electrical system-Battery Test Starter Test, Alternator Test and Maximum Loading Test.
- Test results can be printed out by the build-in Mini Thermal Printer. Testing date and car Number can inputted manually.
- 100 cm long test leads st provides users easy in use.
- Reverse polarity is protected.



BT101T **TRISCO BATTERY TESTER**

- Battery impedance tester for 12-Volt wet & batteries.
- Battery can be tested at engine-running, engine-off and out-of-vehicle of-vehicle.
- Safe & simple - straightforward operations with non-language dependent display caters for users of diferent nationality.
- Reliable & quality - impedance measurement technology gives real time computations with precise measurement.
- No internal battery required with polarity protection in case of wrong connections.



BT101S **SUPER-LITE BATTERY TESTER**

- Suitable for 6V / 12V lead acid batteries.
- Compact and portable, ideal for garages and fleet users.
- Strong yet lightweight steel construction with
 - With integrated handle and clamp holders.
 - Easy and saft to use. No Sparking.
- Hold load on 10 sec. (Maximum)



DC12 **SUPER-LITER BATTERY TESTER**

- 12V battery tester is designed for fast and accurate monitoring of battery condition.
- Heavy duty insulated battery clamps are selected to ensure safe and proper application.
- Automatic overload cut-off.
- 10Sec (manimum).



DAM128 **DIGITAL AUTOMOTIVE METER**

- The Max Display Valve : 3200counts, Accuracy rating $\pm 0.5\%$
- R.P.M : 600~3200/6000~12000 rpm
- Dwell Angle : 4, 5, 6, 8, Cyl
- Working Duty% : 0~90%
- AC/DCV : 0~600V
- Electric Current : 0~10A
- Electric Resistance : 320~30 M Ω
- Frequency : 10~32 KHZ
- Temperature : -30~750



STM1205 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 1 x 12Vdc
- Charging current : Max 5amp (Low & High Select)
- Safety Protection : Input fuse 2Amp, Output fuse 7Amp
- Dimension (mm) : 160W x 220D x 120H
- Weight : 3.0kg

Caution!! Do Not Spark The Battery Clip When Operation.



STM1210 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 1 x 12Vdc
- Charging current : Max 10amp (Low & High Select)
- Safety Protection : Input fuse 2Amp, Output fuse 15Amp
- Dimension (mm) : 160W x 220D x 120H
- Weight : 4.5kg

Caution!! Do Not Spark The Battery Clip When Operation.



STM2410 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 2 x 12Vdc
- Charging current : Max 10amp (Selectable)
- Safety Protection : Input fuse 3Amp, Output MCB 16Amp
- Dimension (mm) : 240W x 270D x 160H
- Weight : 8.0kg

Caution!! Do Not Spark The Battery Clip When Operation.



STM2420 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 2 x 12Vdc
- Charging current : Max 20amp (Selectable)
- Safety Protection : Input fuse 5Amp, Output MCB 25Amp
- Dimension (mm) : 340W x 330D x 300H
- Weight : 16.5kg

Caution!! Do Not Spark The Battery Clip When Operation.



STM4810 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 4 x 12Vdc
- Charging current : Max 10amp (Selectable)
- Safety Protection : Input fuse 5Amp, Output MCB 15Amp
- Dimension (mm) : 340W x 330D x 300H
- Weight : 16.5kg

Caution!! Do Not Spark The Battery Clip When Operation.



BATTERY SERIES



STM4820 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 4 x 12Vdc
- Charging current : Max 20amp (Selectable)
- Safety Protection : Input fuse 8Amp, Output MCB 25Amp
- Dimension (mm) : 340W x 330D x 300H
- Weight : 22.5kg

Caution!! Do Not Spark The Battery Clip When Operation.



STM9610 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 8 x 12Vdc
- Charging current : Max 10amp (Selectable)
- Safety Protection : Input fuse 7Amp, Output MCB 15Amp
- Dimension (mm) : 340W x 330D x 300H
- Weight : 25.0kg

Caution!! Do Not Spark The Battery Clip When Operation.



STM10810 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 9 x 12Vdc
- Charging current : Max 10amp (Selectable)
- Safety Protection : Input fuse 7Amp, Output MCB 15Amp
- Dimension (mm) : 340W x 330D x 300H
- Weight : 26.5kg

Caution!! Do Not Spark The Battery Clip When Operation.



SE300 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 2 x 12Vdc
- Charging current : Max 10amp (Adjustable)
- Safety Protection : Input fuse 2Amp, Output MCB 16Amp
- Dimension (mm) : 240W x 270D x 160H
- Weight : 10.0kg

Caution!! Do Not Spark The Battery Clip When Operation.



SE220 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 12- 24Vdc
- Charging current : Max 20amp (Adjustable)
- Safety Protection : Input fuse 5Amp, Output MCB 25Amp
- Dimension (mm) : 340W x 330D x 300H
- Weight : 16.5kg

Caution!! Do Not Spark The Battery Clip When Operation.

*Picture shown are for reference only



SE715 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 12- 84Vdc
- Charging current : Max 15amp (Adjustable)
- Safety Protection : Input fuse 10Amp, Output MCB 20Amp
- Dimension (mm) : 580W x 320D x 485H
- Weight : 39.0kg

Caution!! Do Not Spark The Battery Clip When Operation.



SE915 BATTERY CHARGER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 12- 108Vdc
- Charging current : Max 15amp (Adjustable)
- Safety Protection : Input fuse 15Amp, Output MCB 20Amp
- Dimension (mm) : 580W x 320D x 485H
- Weight : 44.0kg

Caution!! Do Not Spark The Battery Clip When Operation.



STM2460 BATTERY CHARGER / ENGINE STARTER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 2 x 12vdc
- Charging Power : 350amp
- Charging current : 1 - 60amp (Adjustable)
- Output : 12V Start - 4.2kw / 24V Start - 8.4kw
- Weight : 50.5kg

Caution!! Do Not Spark The Battery Clip When Operation.



S450 BATTERY CHARGER / ENGINE STARTER

- Input voltage : 220Vac - 240 Vac (1 Phase 50HZ)
- Charging voltage : 2 x 12vdc
- Charging Power : 450amp
- Charging current : 1 - 60amp (Adjustable)
- Output : 12V Start - 5.2kw / 24V Start - 10.4kw
- Weight : 37.0kg

Caution!! Do Not Spark The Battery Clip When Operation.



CLT6016 CAR LIGHT TESTER

- Sharp probe tip covered with brass protection cap, check function of car lights faster and easier.
- Check range : 6-12, 24V



CT6228 ELECTRIC CIRCUIT TESTER

- Power on type tests 6, 12, 24V circuits.
- For wire breakers, short, fuses, lamps, replays armatures, etc.
- 4" inspection probe with point cover.
- 36" long 16gauge wire alligator clip.



CT6226 CIRCUIT TESTER

- Safety tests standard primary automotive circuits and on-board computer controlled electrical systems without damaging the micro-processor.
- Operates from 3-15 volts.
- Includes probe adapter for testing famela connectors.
- Supplied with 48" ground wire.



CT6229 LED HEAVY DUTY CIRCUIT TESTER

- High Impedence tester protects computer circuitry,
- Services 6, 12, 24 Volt systems.
- Dual color LED indicates red for power (high) and green for ground (low).
- Heavy -duty probe.
- 6' (1.8M) long heavy-duty 18 gauge dual leads with battery clips and spring strain relief.
- High-impact plastic body.



CC6348 CAR CHECKER

- Automotive voltage tester, not to be used in household appliances.
- Voltage range : 3-48 volts



SPWT6270 SPARK PLUG WIRE TESTER

- Quickly locate faulty plug wires. No shock hazard.
- Now you can check spark plug wires without piercing the wires.
- Light flashes indicating sound wire.



SGT6810 ADJUSTABLE IGNITION SPARK GAS TESTER

- Provides instant diagnosis of ignition problems whether a faulty coil, ignition wire of spark plug.
- Plugs into coil to measure jump of spark from 0 to 40,000 volts.
- Works hands-free and can be use as a troubleshooting tool for road tests.



BATTERY SERIES



BC-HD HEAVY DUTY BATTERY CLAMP

Item Code	Capacity
BC-HD	300 Amp
BC-HD	300 Amp



BFT1100 BRAKE FLUID TESTER

- Finally know when you need to replace your brake fluid.
- Moisture is the enemy of your brake system as brake fluid absorbs moisture.
- Takes the guessing game out of determining how much moisture is in the system.
- Inexpensive tool for checking the brake fluid in all your vehicle.
- Determines if the fluid needs to be changed or not.
- 3 LEDs make it easy and takes only seconds.



BC75 75MM BATTERY CLAMP



BAC6037 CAR BATTERY & ALTERNATOR CHECKER

- Led indicators verify condition of battery and alternator.
- Suitable for 12V DC systems.
- Magnetic backing sticks to metal surfaces for hand-free operation.



JC15HD 300AMP JUMP START BOOSTER CABLE SET

- Two pair Red & Black heavy duty battery clamp.
- 16ft 300Amp heavy duty jump start cable.



IT6517 INFLARED THERMOMETER

- Laser ON/OFF ; °C/°F Selection
- Changeable between ∞ and ∞
- Resolution: 0.1 ∞ (0.1 ∞)
- Accuracy : $\pm 2^{\circ}\text{C}$ / $\pm 2\%$
- Distance Sport Ratio : 12:1
- Emssivity : 0.95 (Pre-Set)
- Response time & Wavelength : 500ms & (8-14um)
- Infrared Thermometer : -32 $^{\circ}\text{C}$ ~ 360 $^{\circ}\text{C}$
- Auto Poer Shut Off
- AAA x2 Battery Operation



BB6911 METAL CASE BATTERY BRUSH

- Designed of cleaning the battery terminals.
- You can use on both sides.



CT202B CRIMPING TOOL

- Applicable: Use with the automotive terminals and open barrel termianls.

**Picture shown are for reference only*



AFT6901 ANTIFREEZE TESTER

- Avoid winter freeze-ups and summer boil-over.
- Test all permanent (Ethylene Glycol) solutions with radiator hot or cold.
- Two scale show freeze point of radiator solution and boiling point of summer coolant.



DTS4404 4PCS DISCONNECT TOOL SET

- Used on 1981 the current Ford cars and pickups having spring lock connection on the A/C system
- For 3/8", 1/2", 5/8 & 3/4" Couplers.



DTS4407 7PCS DISCONNECT TOOL SET

- Easily disconnects air conditioning lines and quick connect fuel lines.
- Size include : 1/4", 5/16", 3/8", 1/2", 5/8", 3/4" & 7/8"



DTS4408 8PCS DISCONNECT TOOL SET

- All the disconnect tool , you need to work with spring locking coupling, fuel line and transmitting cooler lines.
- Contents :
Aluminium disconnect tool :
- 1/4" (Black), 5/16" (Red),
- 3/8" (yellow), (Blue).
Two ends disconnect tool : 5/16" - 3/8"
Long disconnect



DTS4409 9PCS DISCONNECT TOOL SET

- All the tool you need to work with spring locking coupling, fuel line, and transmission cooler line.
- Contents :
Spring locking tool : 3/8" (Red), 1/2"(Blue), 5/8"(Black), 3/4"(White) Fuel



SDT4011 AIR COND SPRING DISCONNECT TOOL

- Special design for removing the spring lock coupling in A/C system.
- Two tools in a set for the different size of coupling .
- Applicacable : TOYOTA After 2000





HM-T BATTERY HYDROMETER

- Test the battery in seconds.
- Color-coded float for easy reading.



MGK6134 R-134A MANIFOLD GAUGE KIT

- Inclosed adjustable coupler.
- R-13A sight glass manifold with three 60" color-coded hose.
- With sight glasses.
- High pressure : 0~500psi (0~35kg/cm)
- Low pressure : 0~350psi (-1 ~ 20kg/cm)
- Vacuum : 0 ~30 in/hg



QC6134R QUICK COUPLE

- Inclosed the high side and low side coupler.
- The valve core puller is adjustable to fit the different valve core.



LD455 LEAK DETECTOR

- Detects Halogen leak, such as R134A, R12, R410A, R22 and R660 etc.
- Monochromatic LED display with six-level leakage alarm.
- Convenient and fast reset function.
- Real-time flexibility with vari-speed adjustment.
- Rtricolor battery voltage display.
- Two Alkaline batteries.
- 14-inch flexible stainless probe.
- Quality sensor that can detect finely-leaked halogen gases.



PW6899 COMPRESSOR CRANKSHAFT PULLEY WRENCH

- To fix A/C compressor crankshaft pulley and be convenient to install .
- There are 2 models of 4 clutch hub remover in this tool kit.
- Some removers also can install the clutch hub.



CRK6189 A/C COMPRESSOR CLUTCH REMOVER KIT

- These tools are designed to remove the clutch hub of compressor.
- There are 2 models of 4 clutch hub remove in this tool kit.
- Some removers also can install the clutch hub.



BATTERY SERIES



EE270

ELECTRIC ENGRAVER


- Creative Engraving on metal, glass, wood, plastic, ceramics, leather.
- Protect valuables by engraving your social security number.



APS6869

12V AUTOMOTIVE POWER SUPPLY

- This 12 Volt automotive power supply is used to avoid the loss of memory during the battery replacement.
- Power supply : 12V battery (recommended) or 9V battery.
- Function : LED display, mis-connected Protection, low battery capacity alarm.
- Application : Vehicle equipped with OBD II connector.

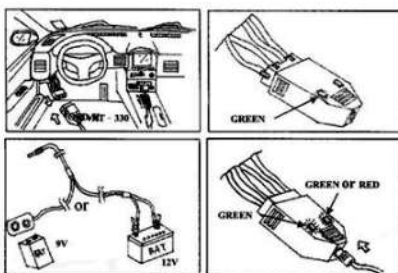

MLL6606

MAGNETIC LED LAMP

- Power Bank LED working lamp over view.
- Power bank can be detached solely for mobile devices.
- Magnetic base allows LED light rotating in...
- 360 Degrees free rolling.



IWL3018DC

DC INSPECTION WORKING LAMP

- Smart Design.
- Reverse polarity protection.
- Swivel Hook For Easy Use.
- On-off switch on housing for power control.
- Voltage : 12V (DC)
- Lamp : 18W (DC) Fluorescent bulb (4pin)
- 16" Cord with 12 volt clip.
- Battery clip included
- Wire Length:18ft



IWL3018AC

AC INSPECTION WORKING LAMP

- Smart Design
- Reverse polarity protection.
- Swivel Hook For Easy Use.
- On-off switch on housing for power control.
- High quality disposable handlamp with transparent cover.
- Voltage :AC220-240V. AC60HZ
- Lamp : 18W (AC) Fluorescent bulb (4pin)
- Wire Length:25ft

*Picture shown are for reference only